

RHM and RHE installation the screens can be connected to PE_C. In case of substantial potential differences a potential equalization cable is mandatory.

When connecting the sensor and transmitter the respective local code for electrical

installations must be considered.

Beware that there might be additional considerations for installation in hazardous areas.

Do not open the RHE42 under power.

Terminal assignment channel 2, drawing shows I/O option i2				
Version	CH2+		CH2-	
	Terminal	Function	Terminal	Function
i1	42	Digital output 2 (+)	43	Digital output 2 (-)
i2	46	Digital input 1 (+)	47	Digital input 1 (-)
FF, F2	77	Foundation Fieldbus FFH1 (FISCO) (+)	78	Foundation Fieldbus FFH1 (FISCO) (-)
PA, P2	77	Profibus PA (FISCO) (+)	78	Profibus PA (FISCO) (-)



Intrinsically safe I/O circuits must only be operated with certified barriers or isolating amplifiers

created / revised			
Date	22.11.2022		
Drawn	H.G.Rudolph		
Appr.	M.Weber		



Wiring Diagram RHE42 (is) RHE42-****-**PA-****-

Project	
Customer	
Draw Rev.	E42W-E_PA_Rev_1_2
Sheet	1/1